

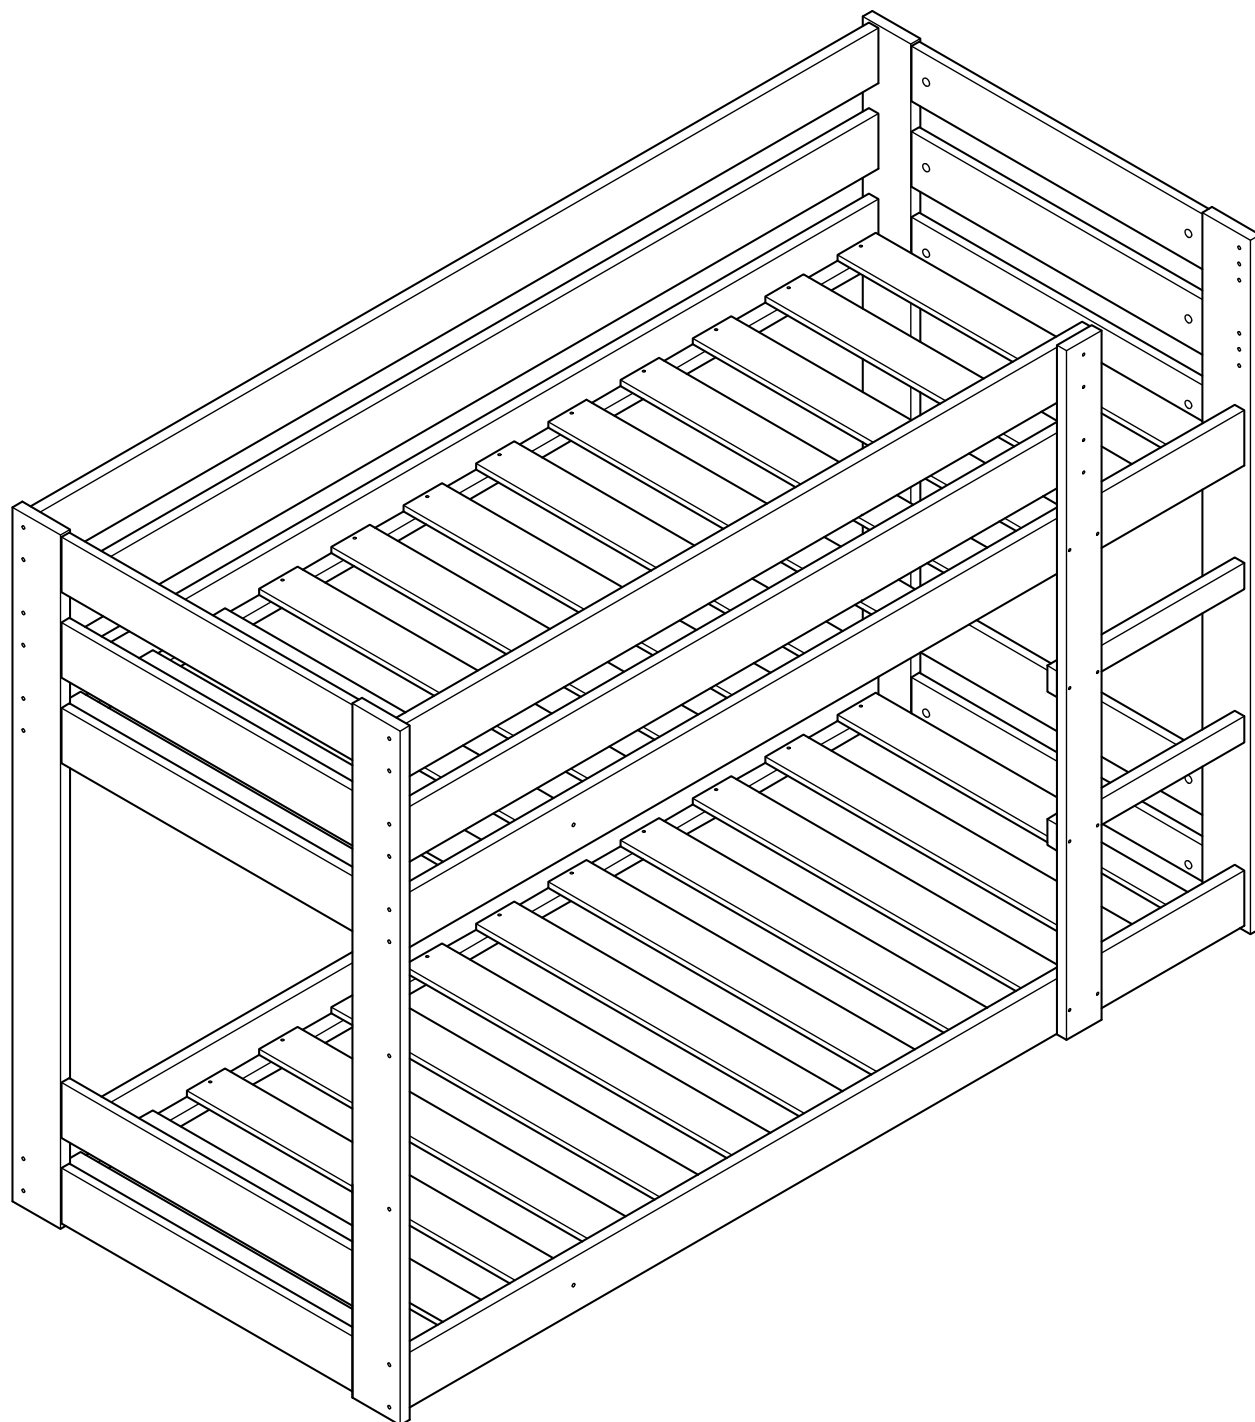


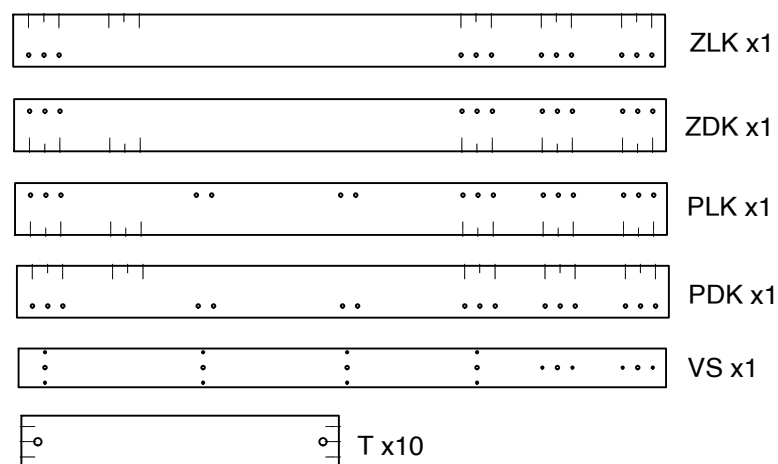
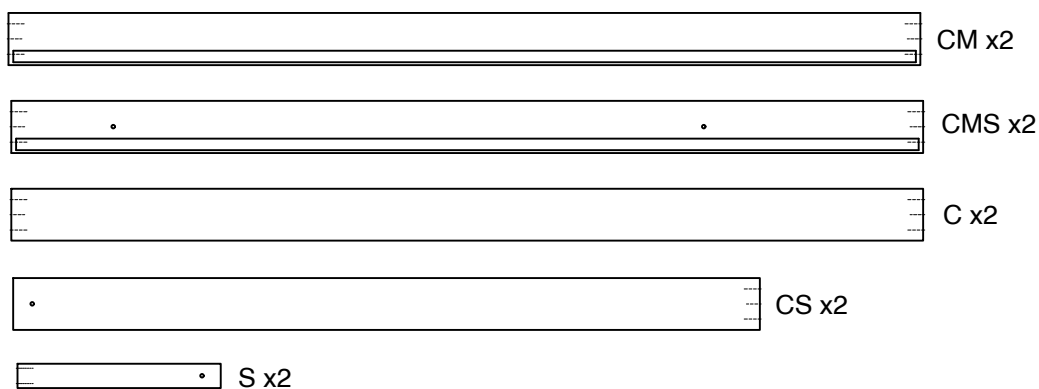



MONTESSORI 90D

Etagenbett 90x200 cm
Bunk bed

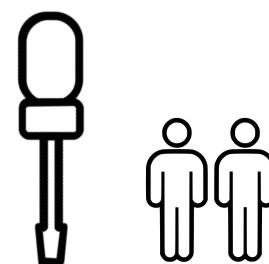


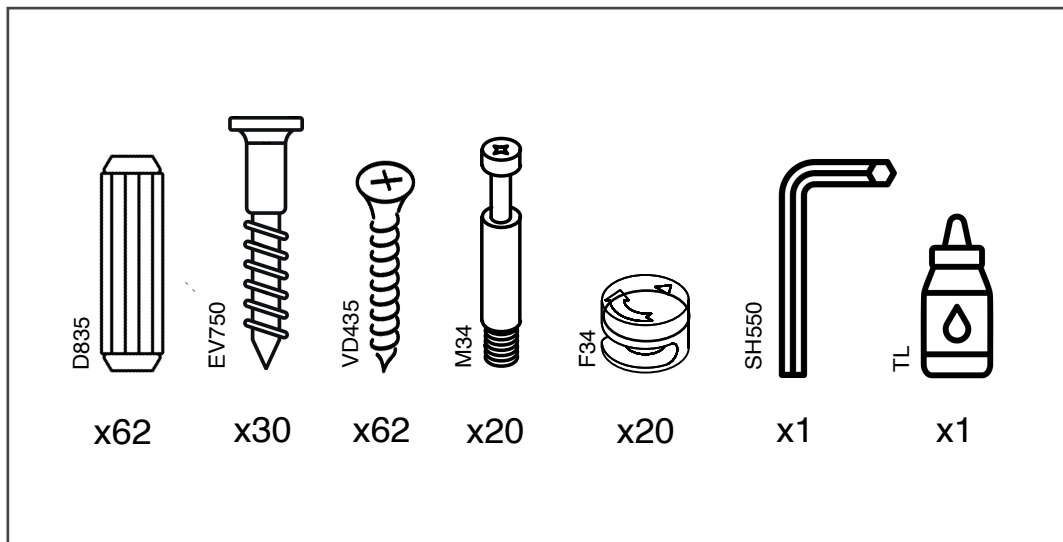


1

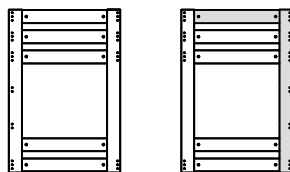


 x10  x10

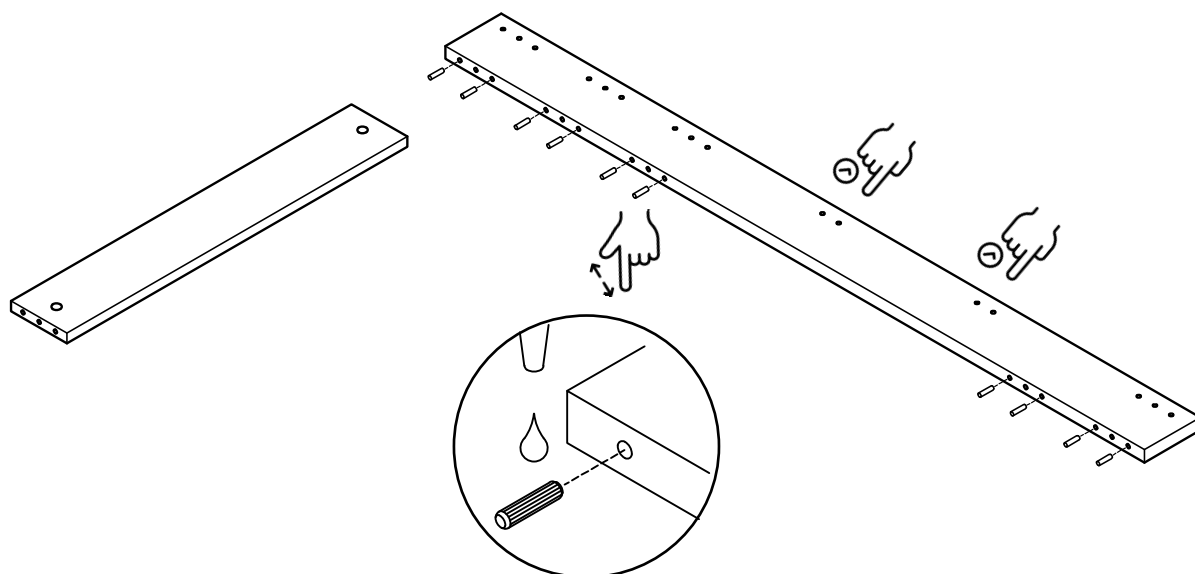


2

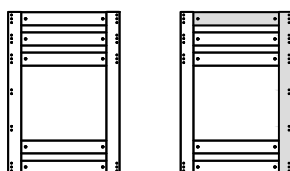


 x5

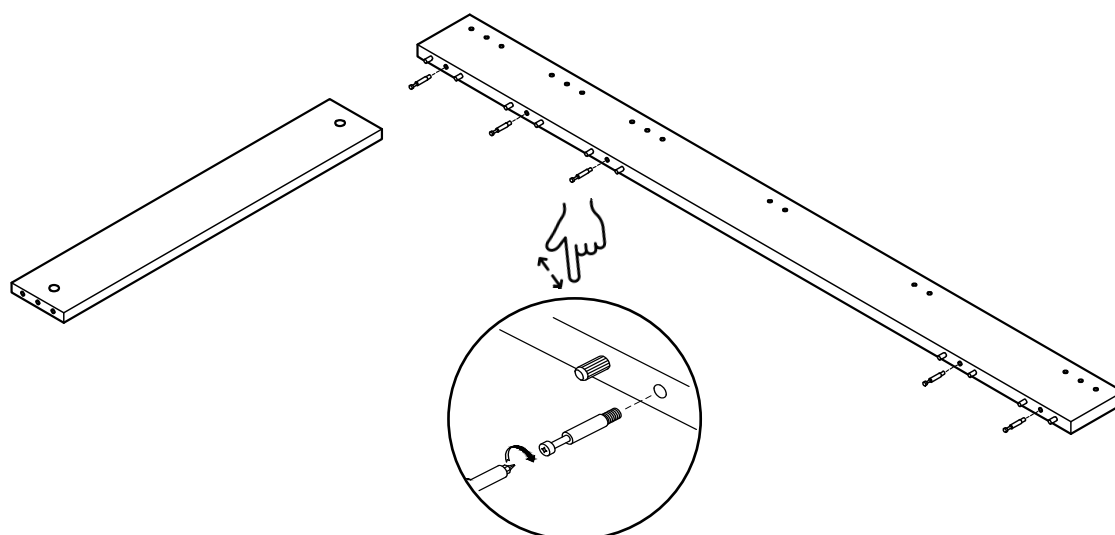


3

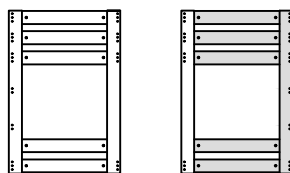


Drop x10

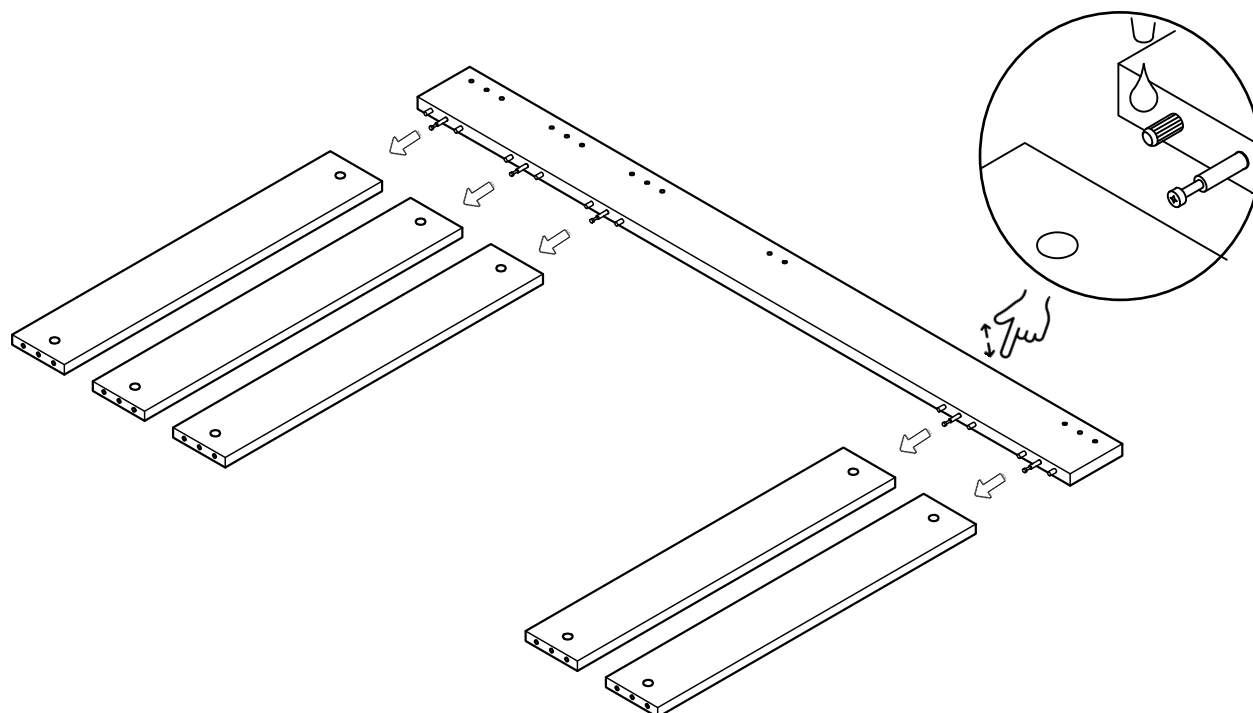


4

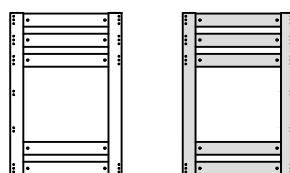


Pin x10

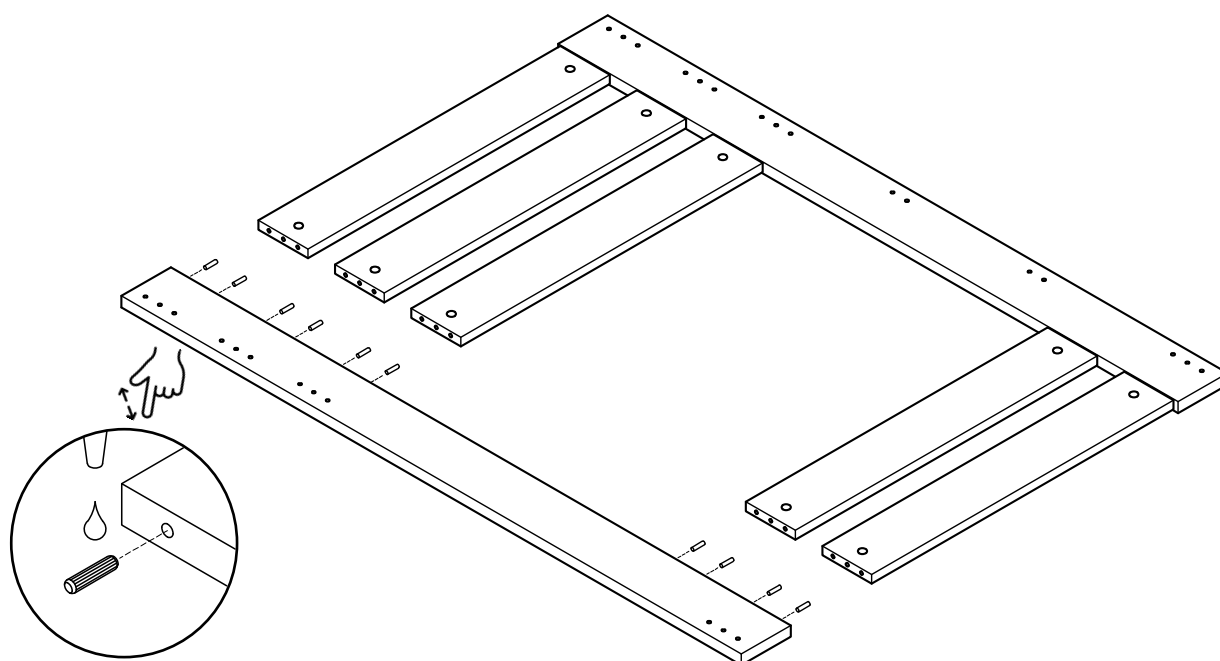


5

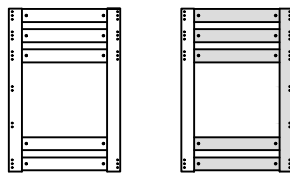


 x5

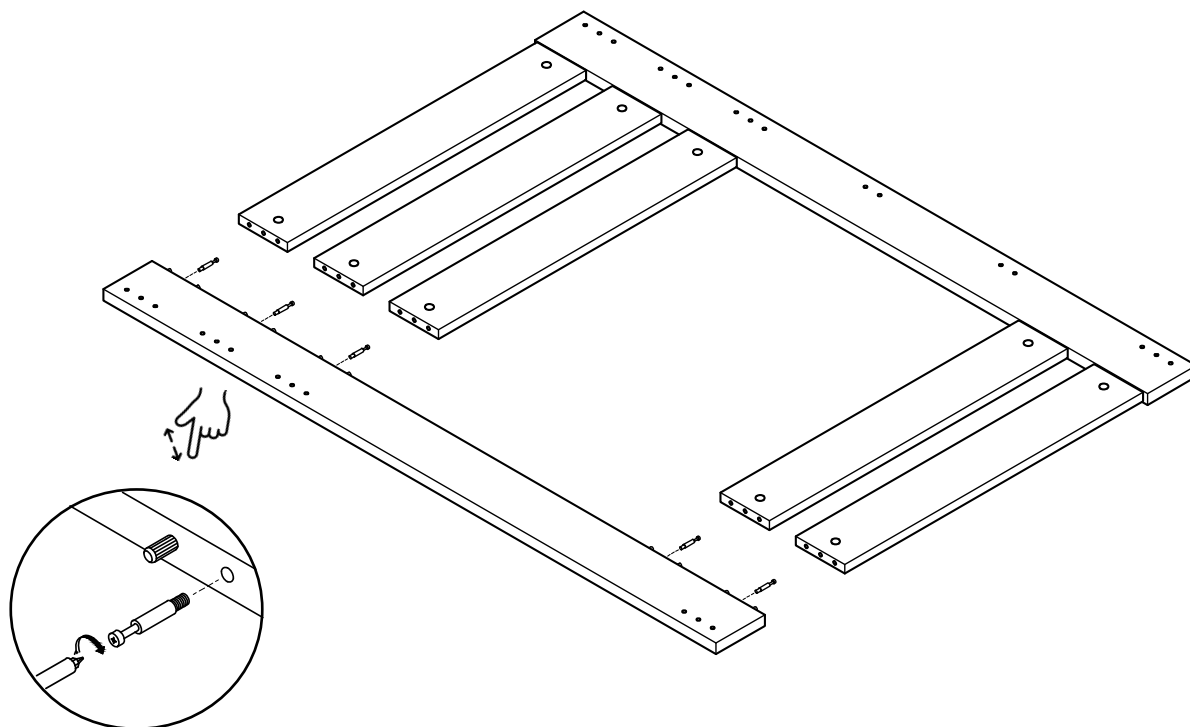


6

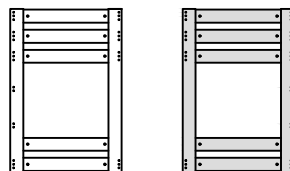


 x10

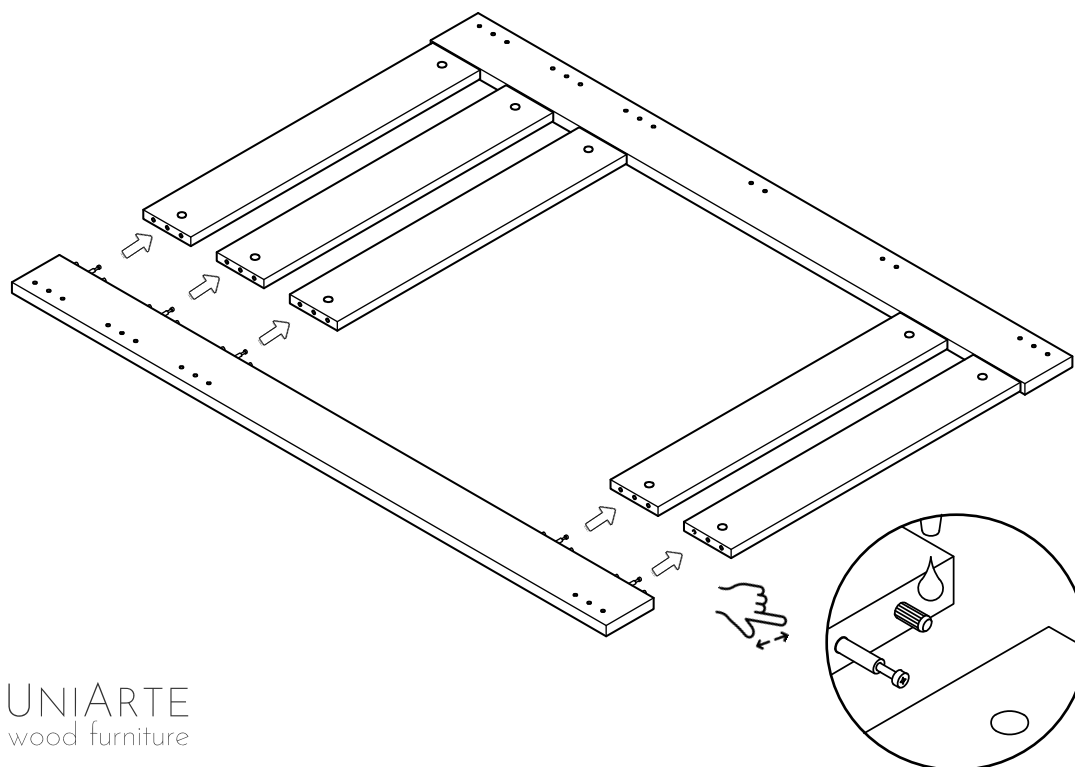


7

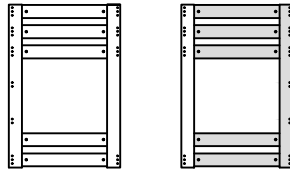


 x10

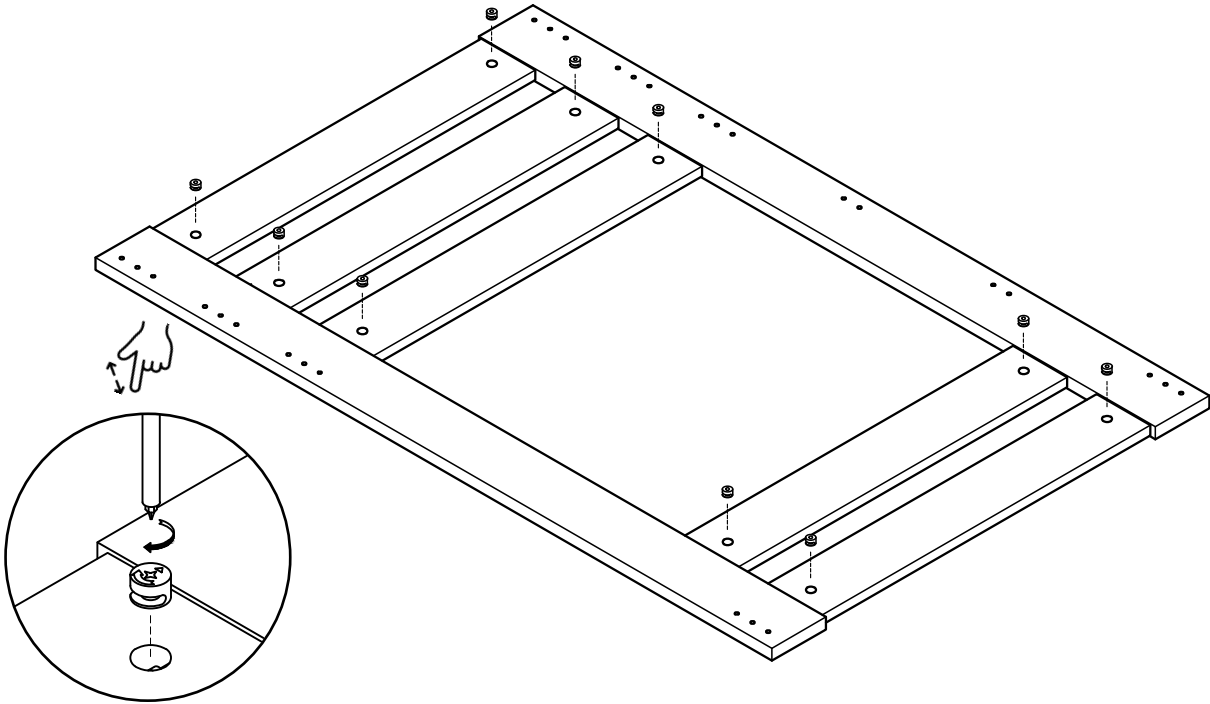


8

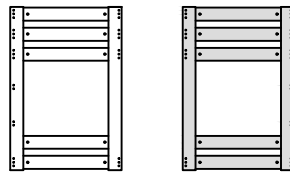

 x6

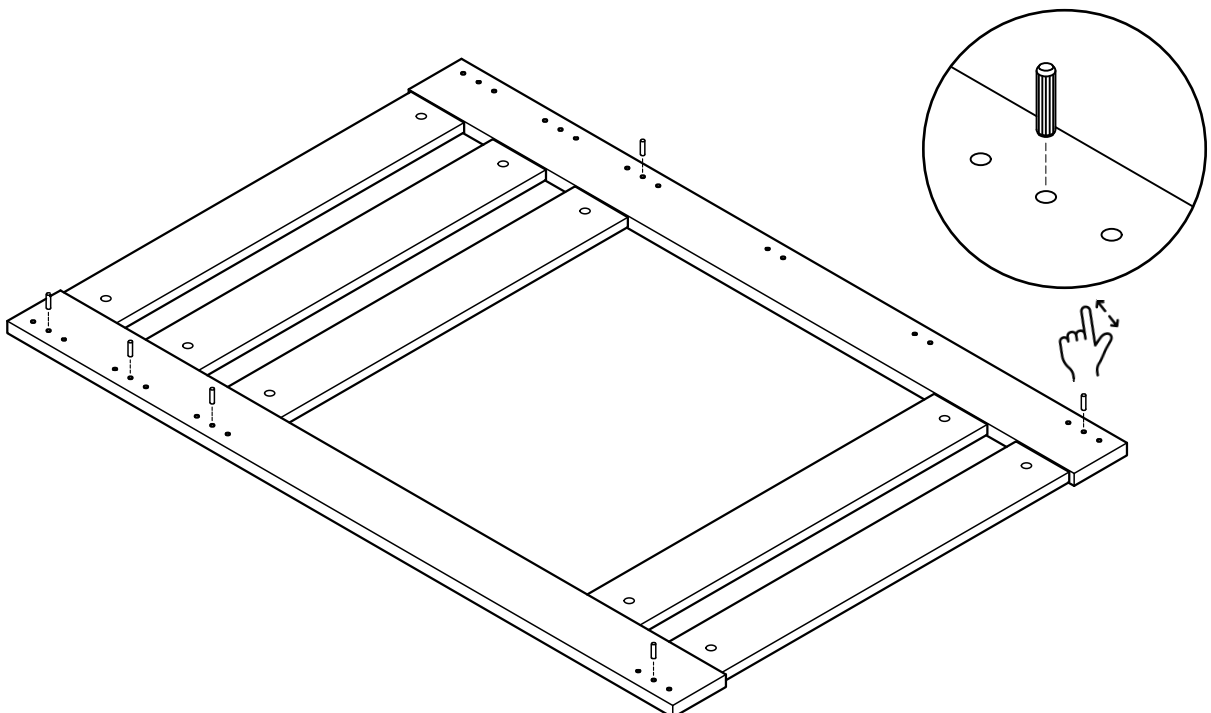


9

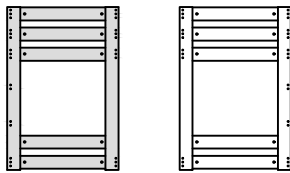


 x26  x10  x10



1

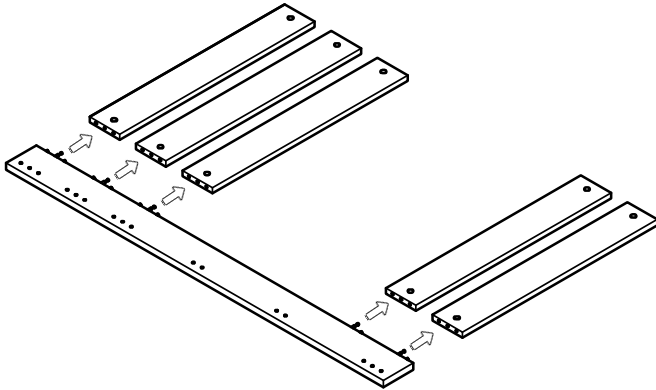




2

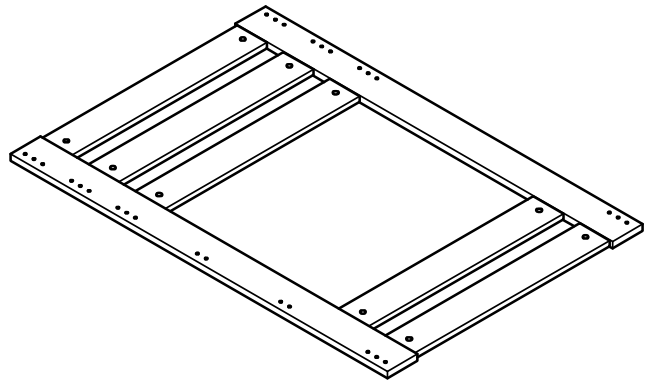



10

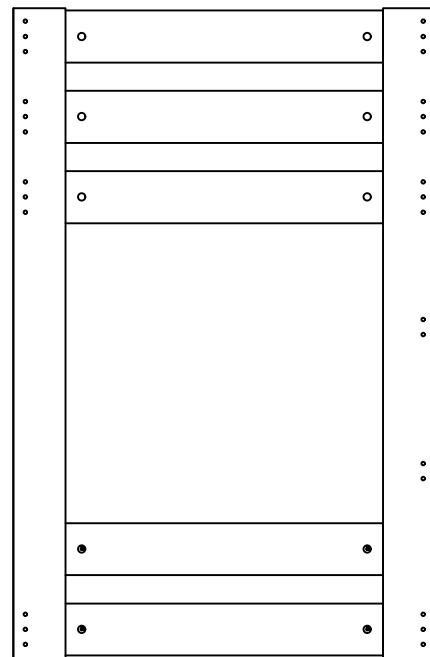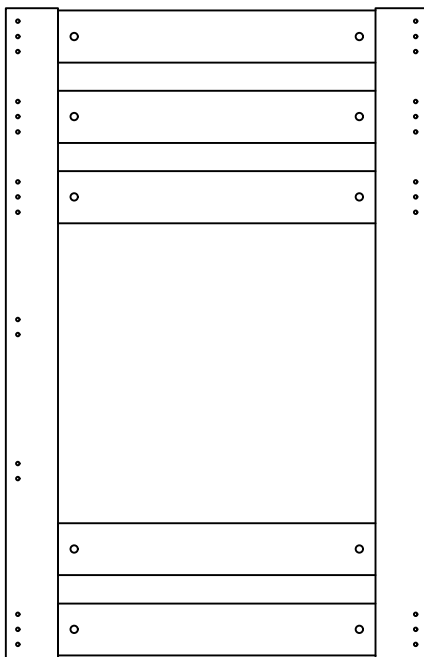


11

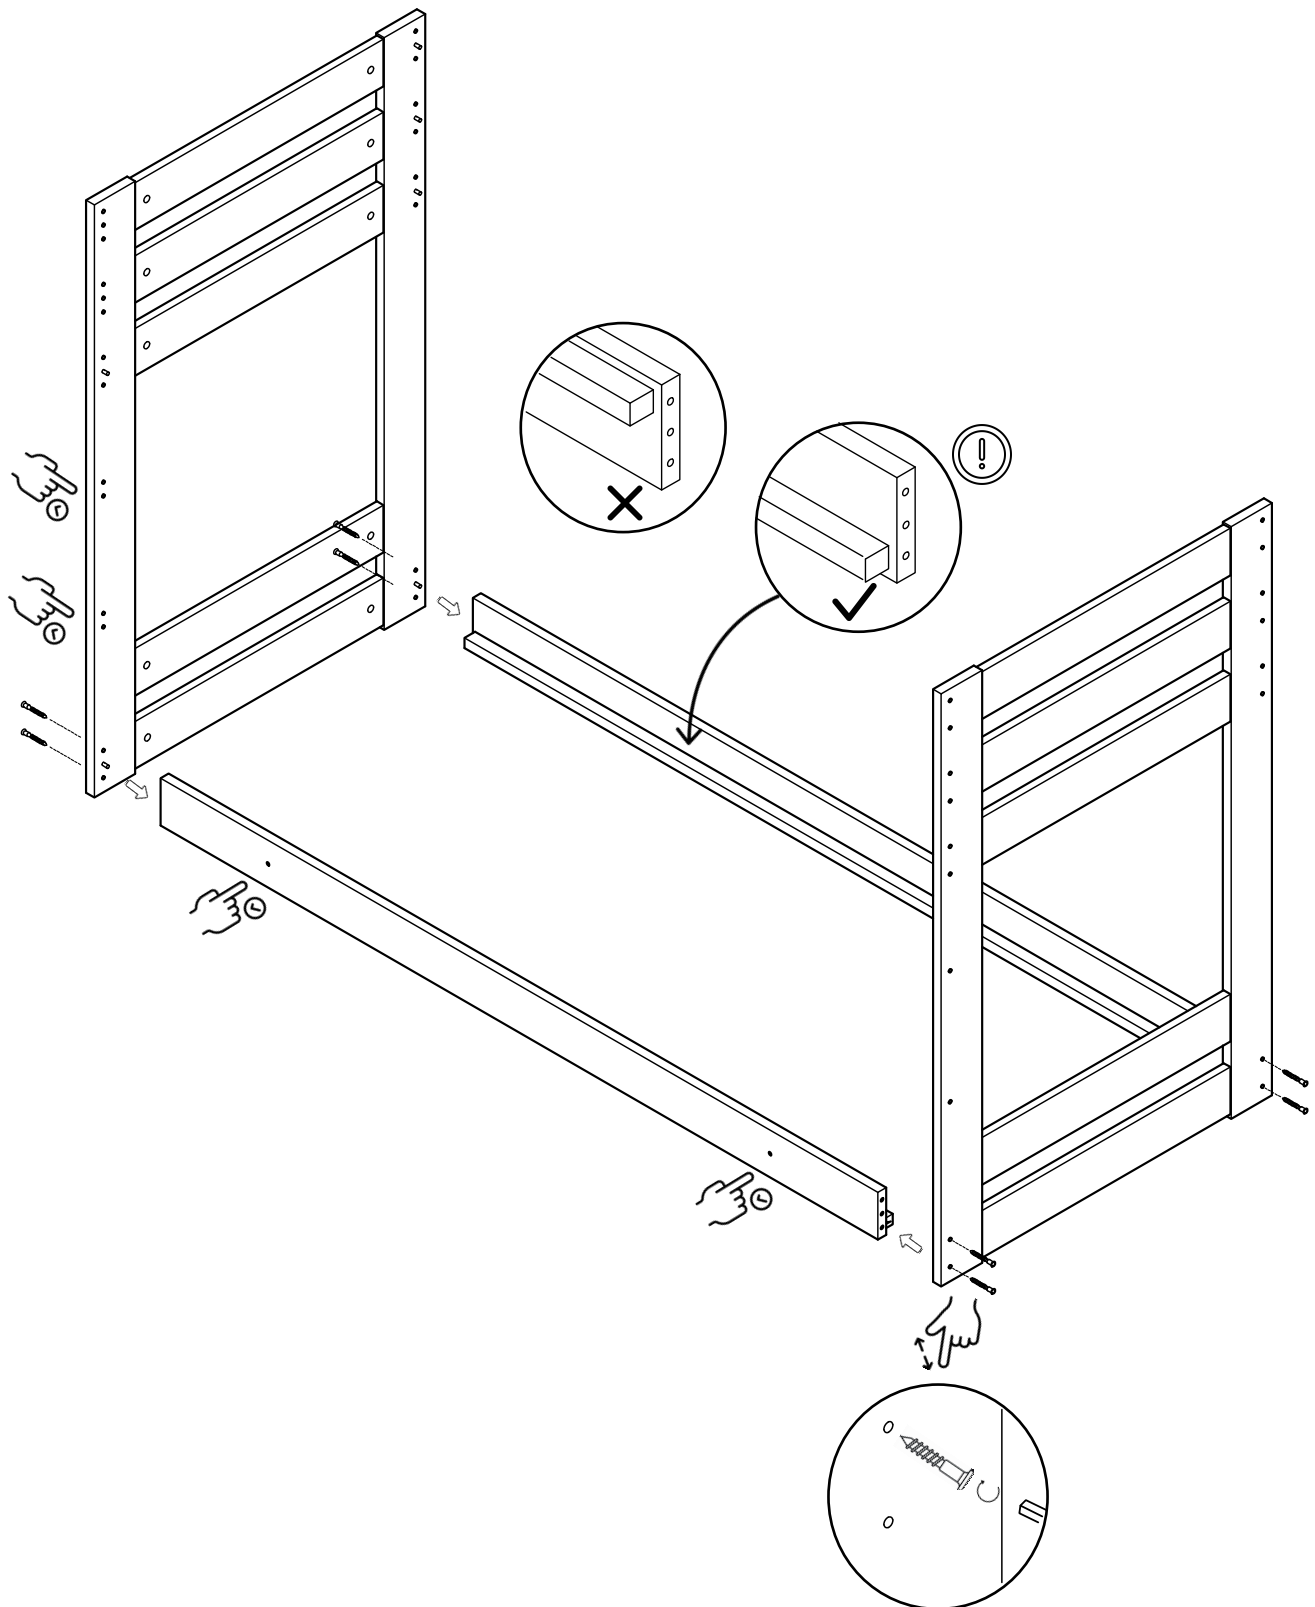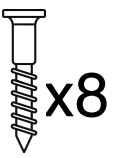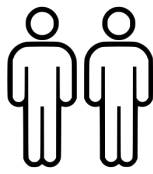



12


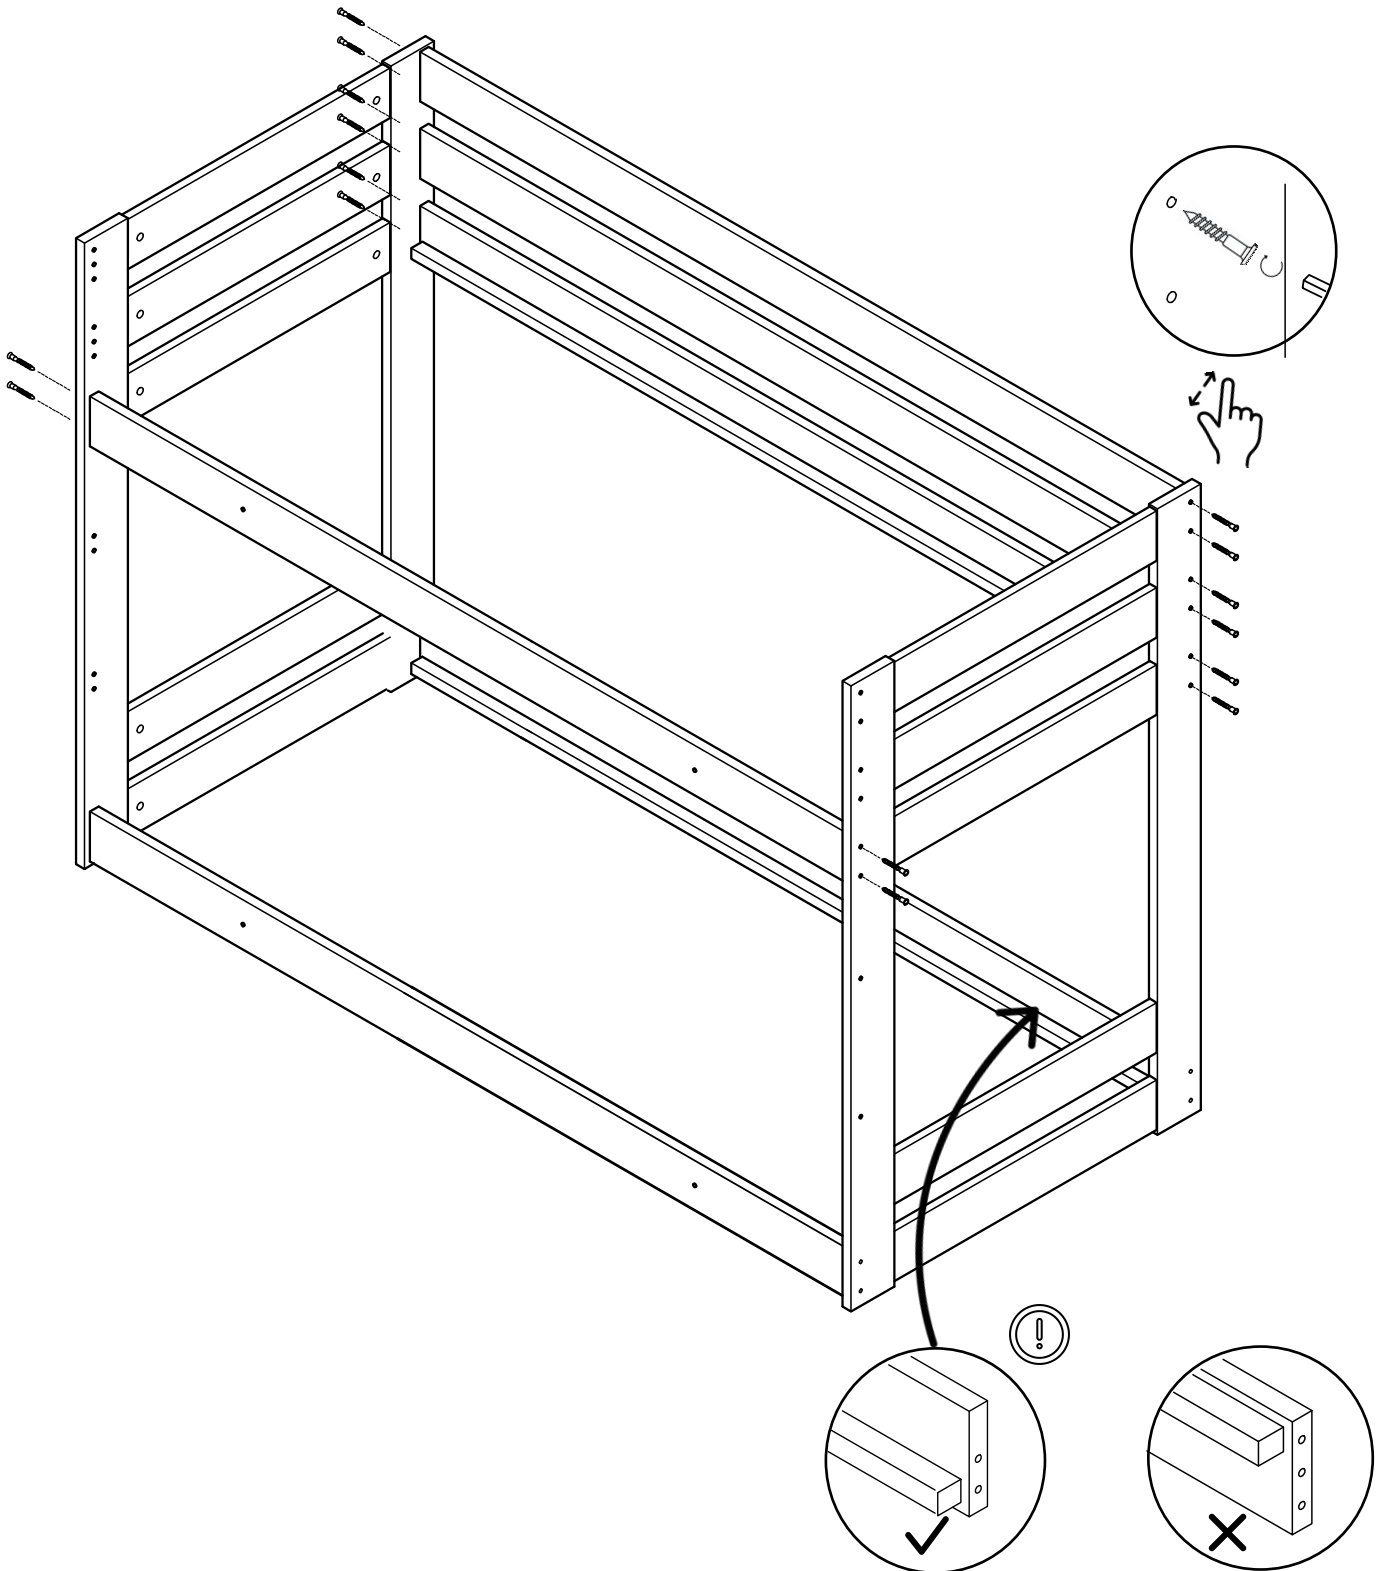
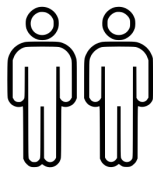


13





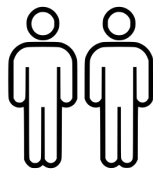


 x26


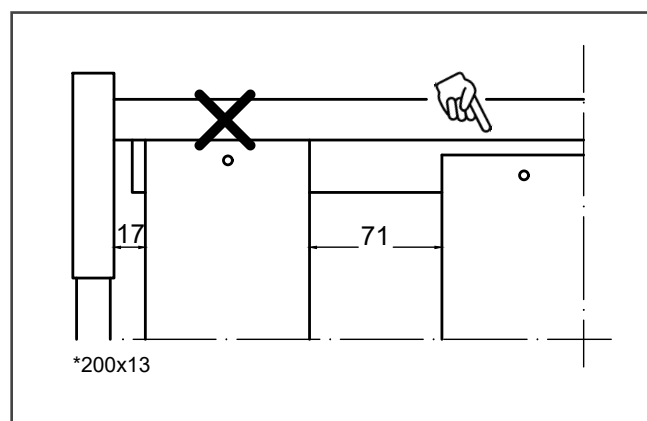
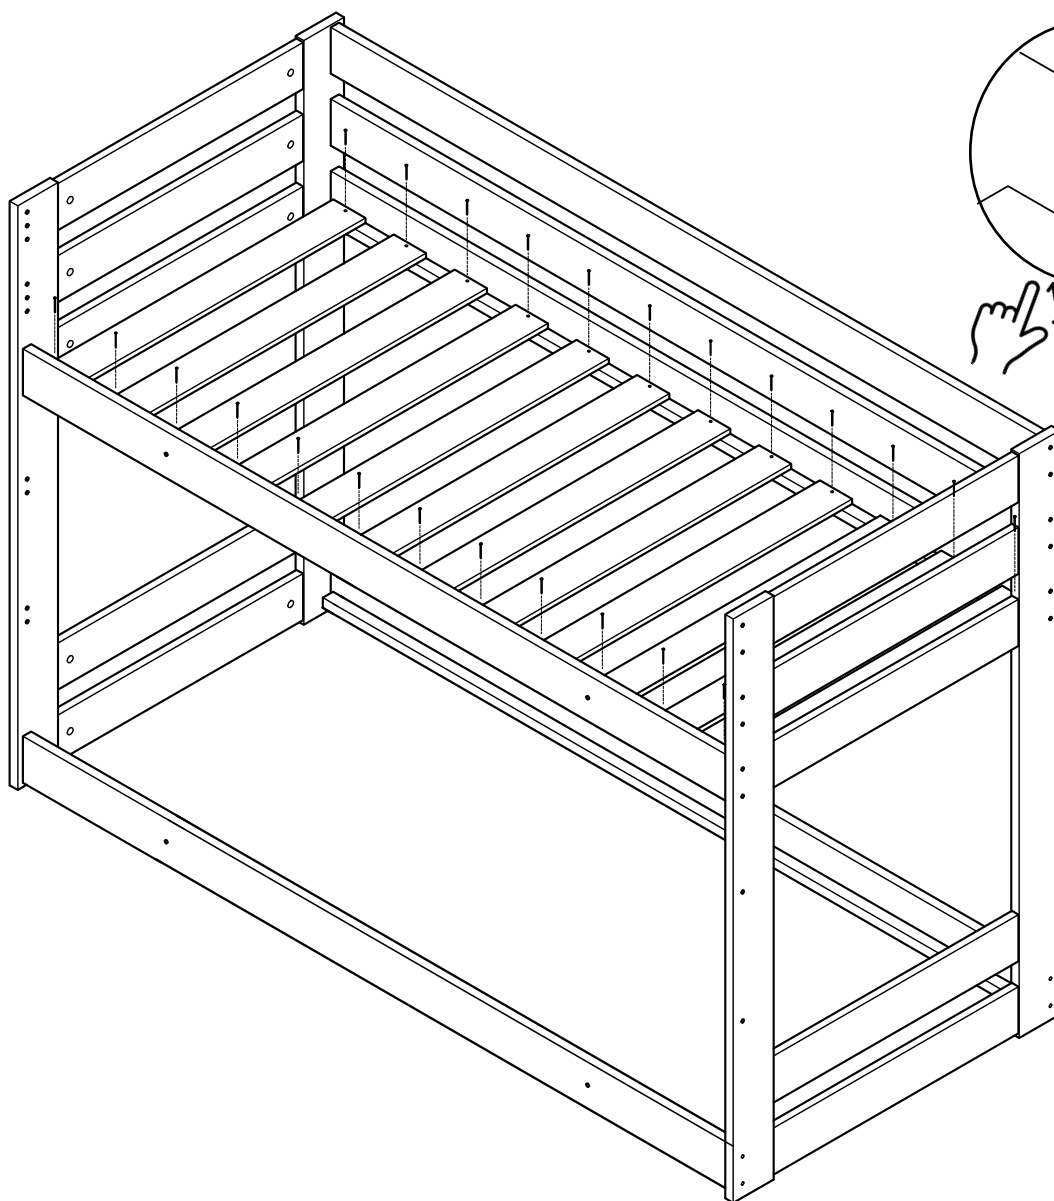


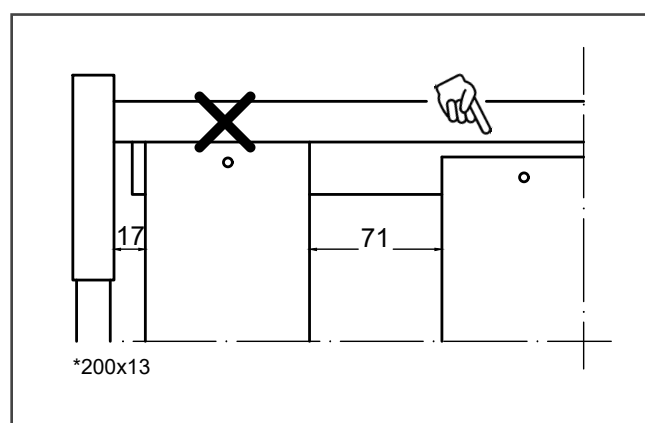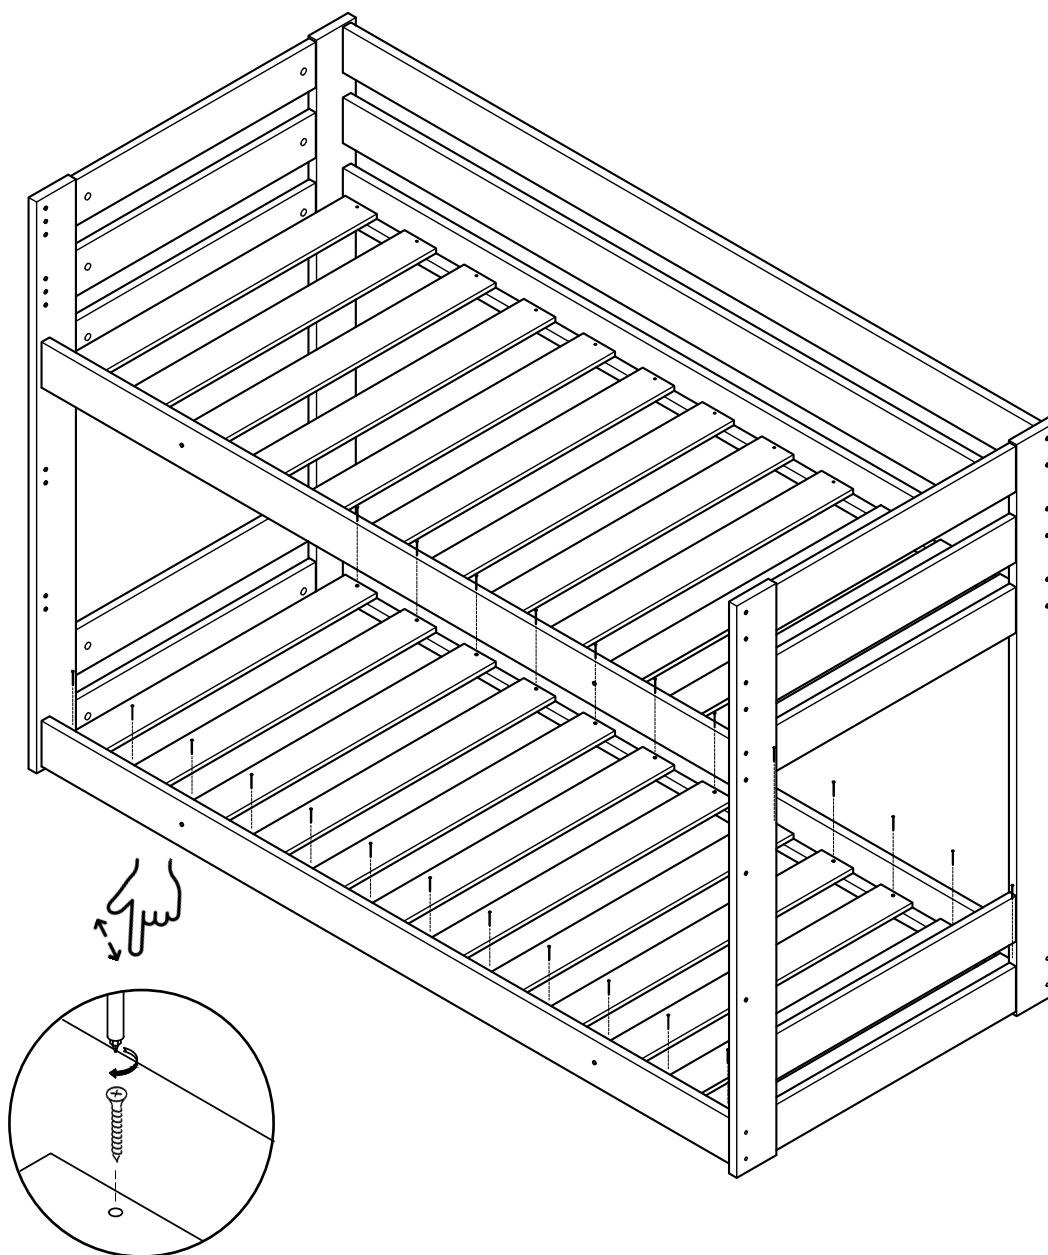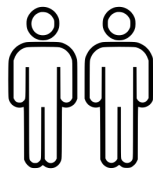




15

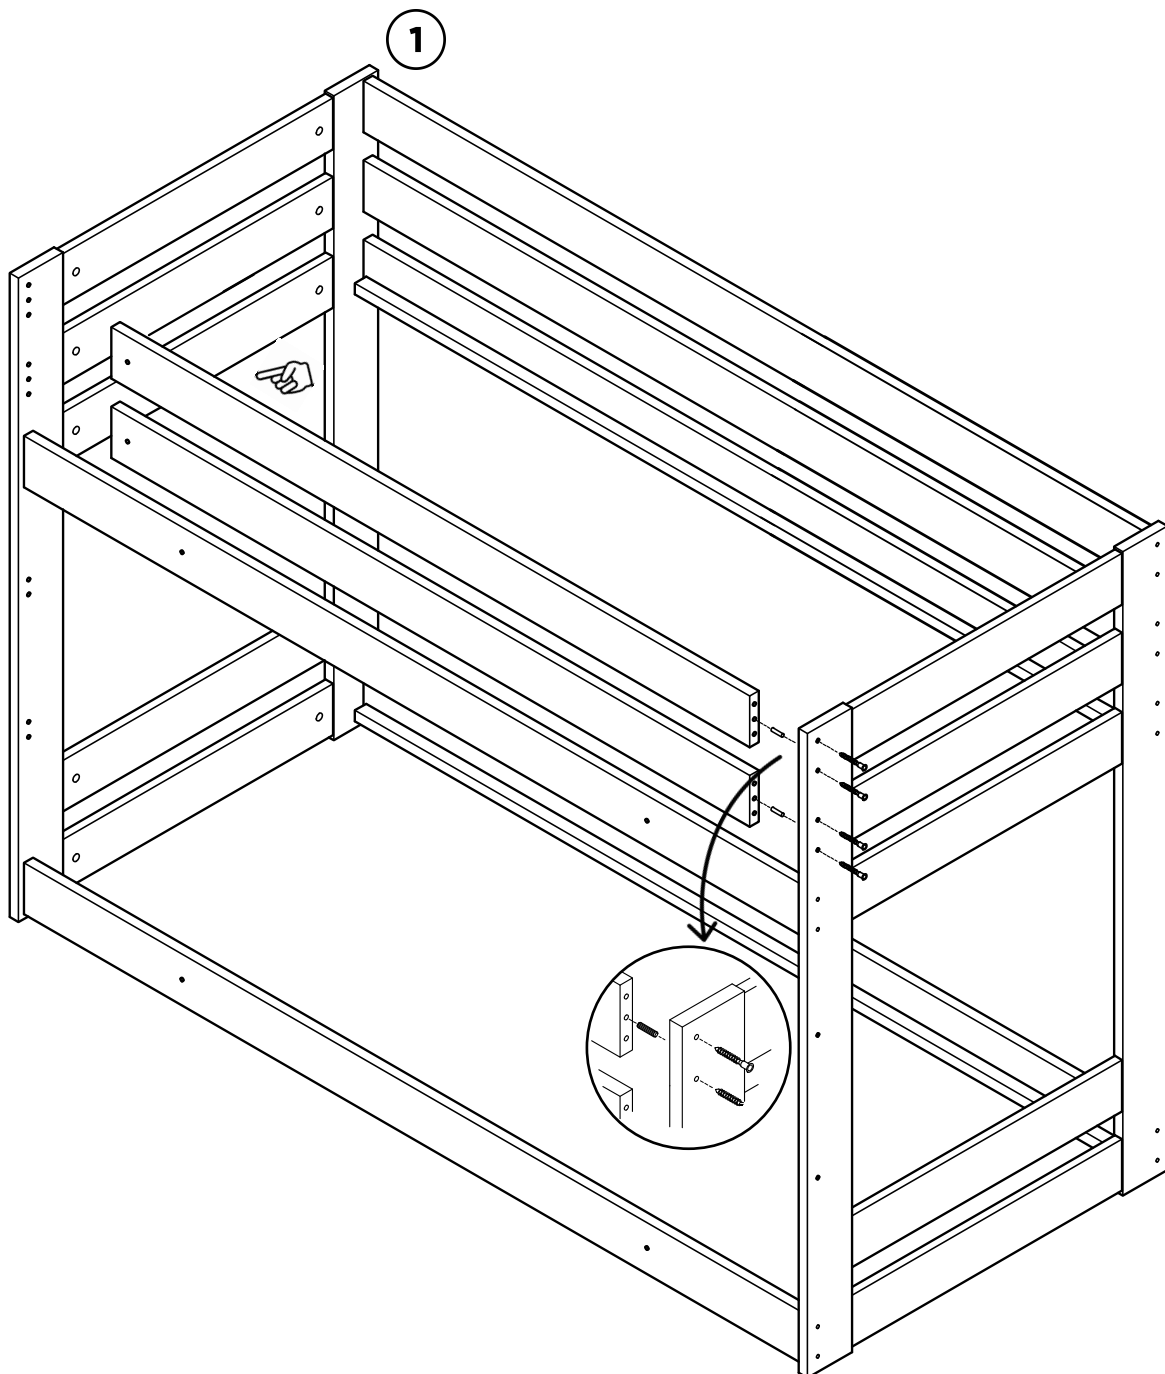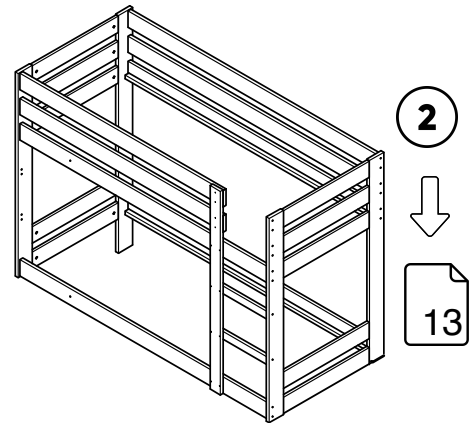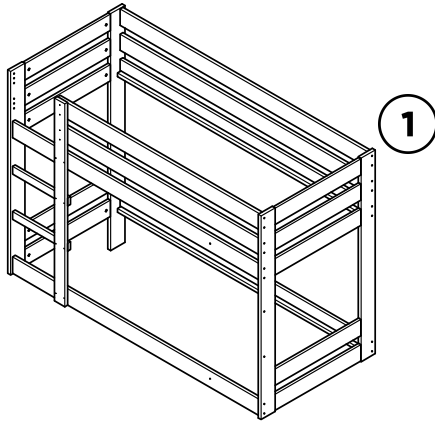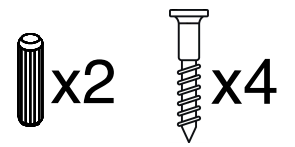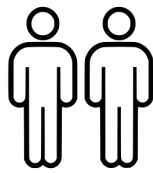


16

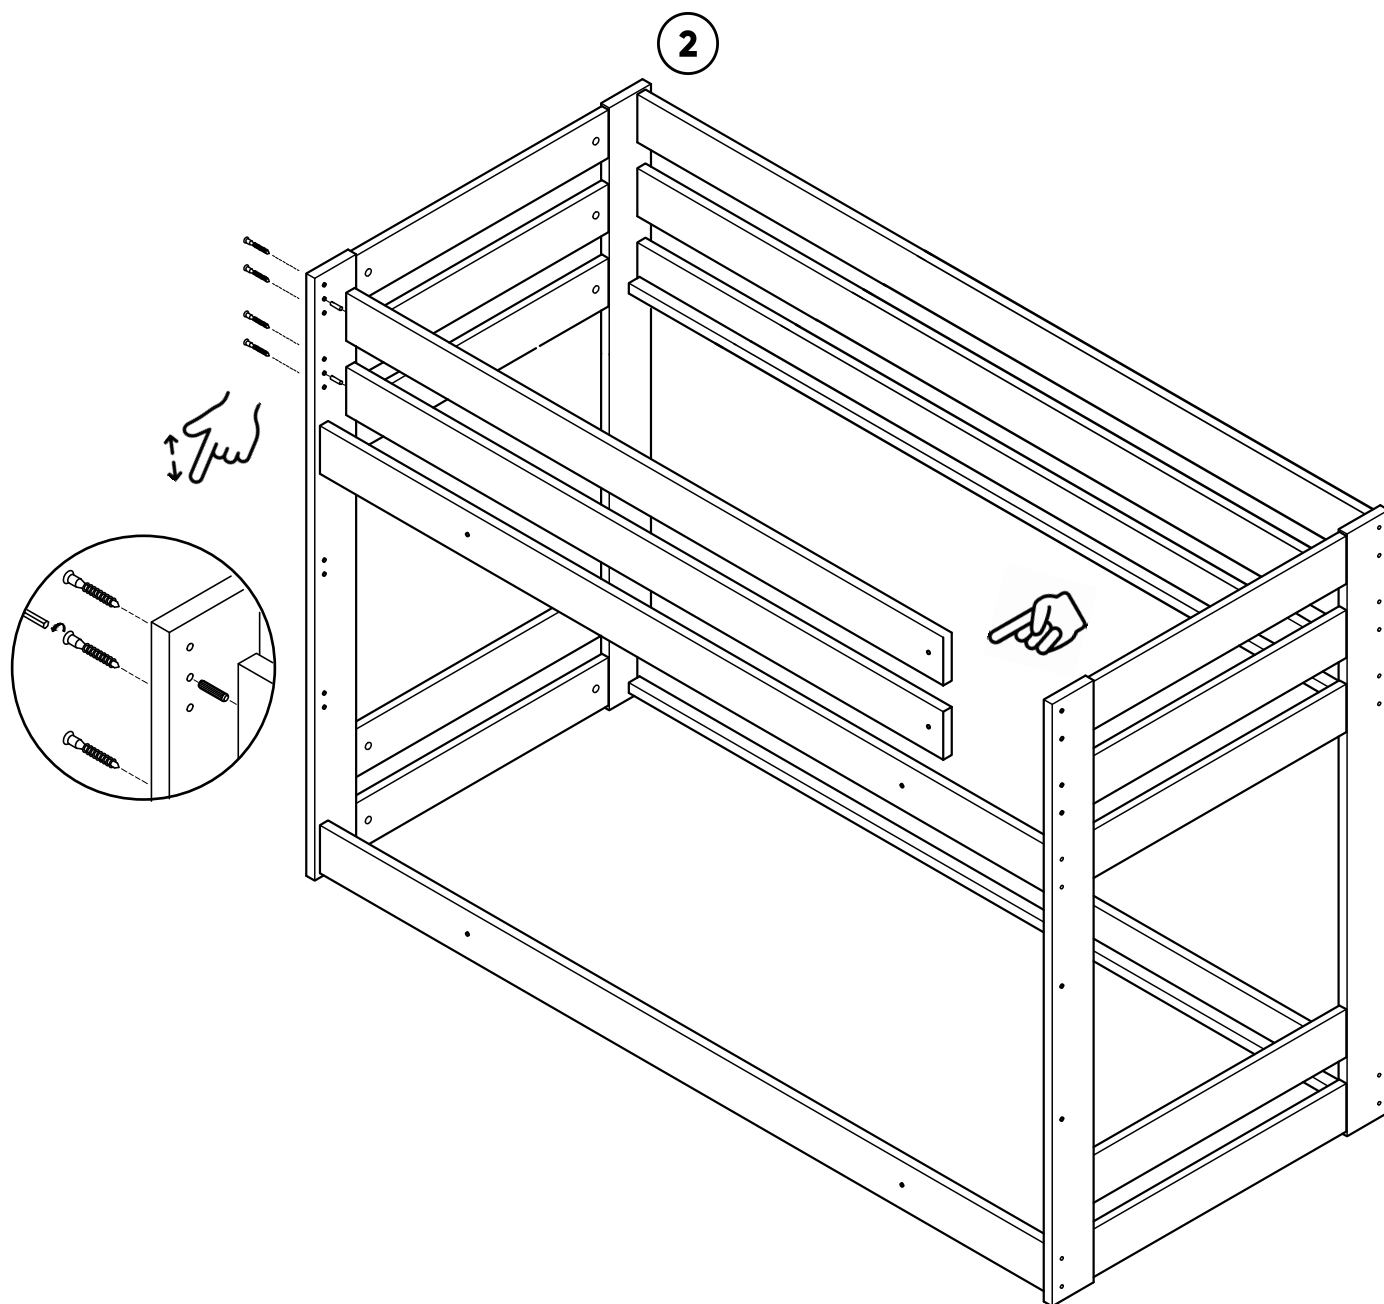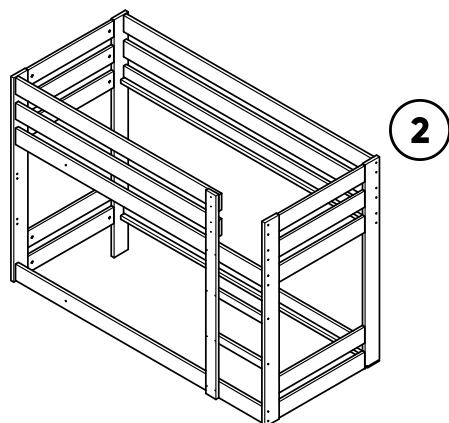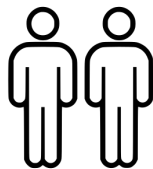

17

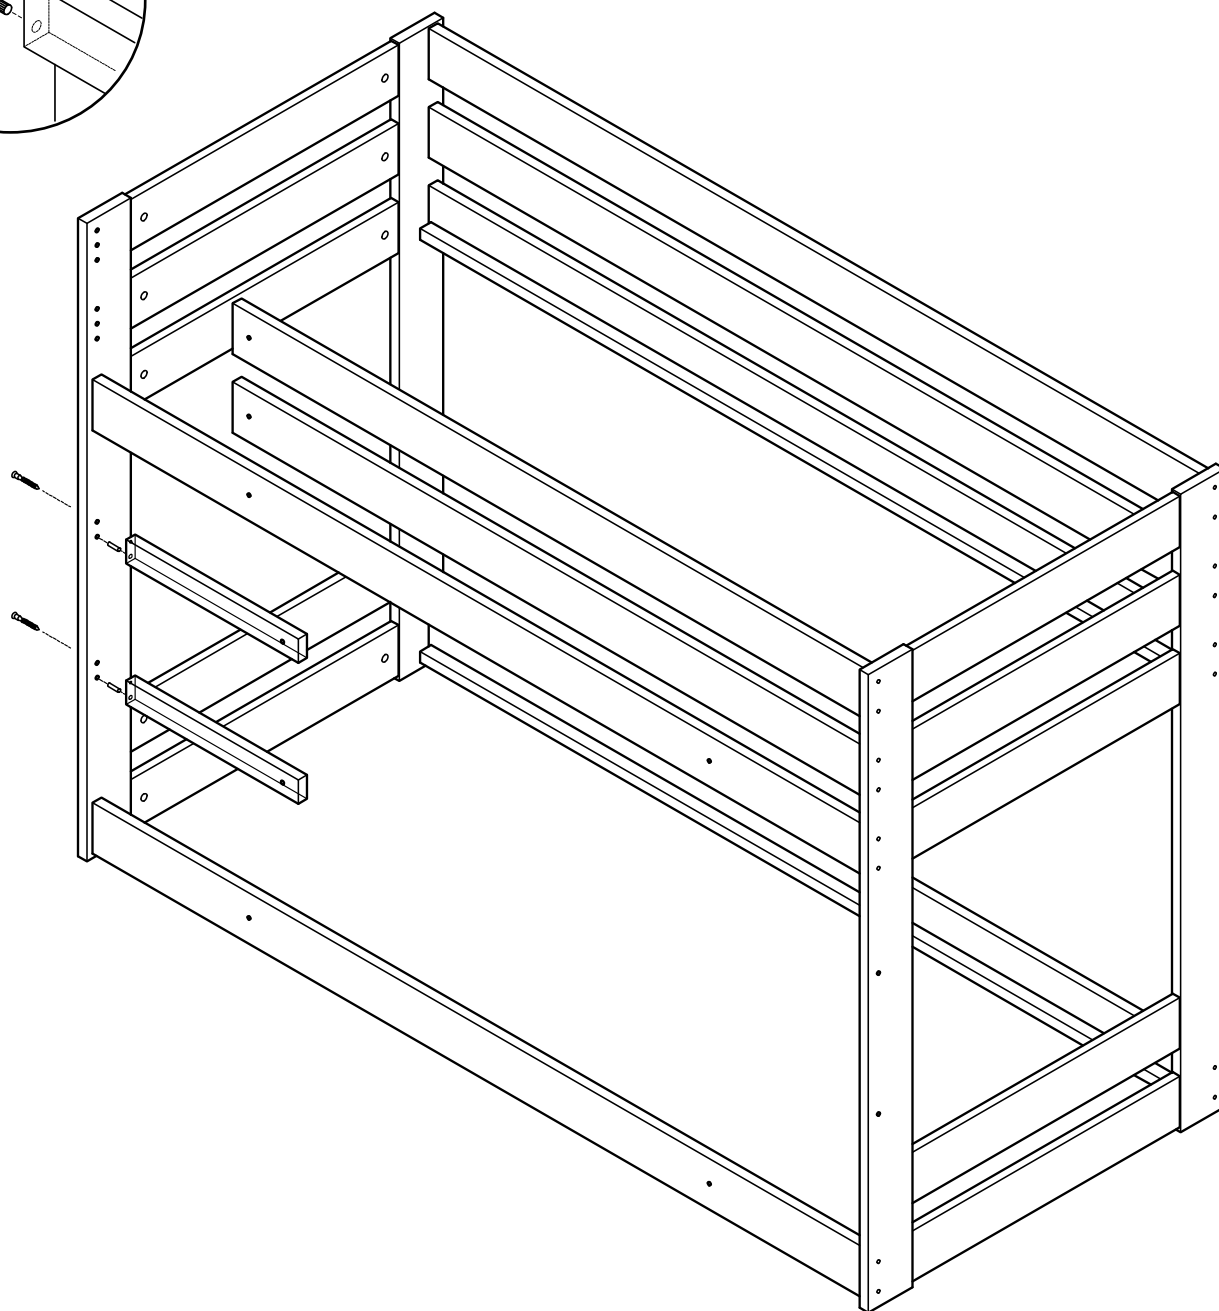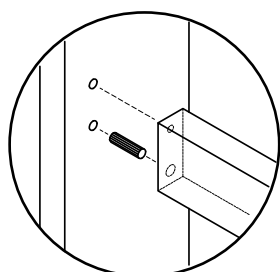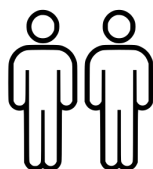

18

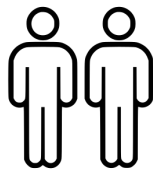

 x6

 x12

